

Separator

Written by

Thursday, 13 August 2009 20:48 - Last Updated Saturday, 21 November 2009 22:51

- The compressed air will be separated from dust and condensate
- Cooling fins enhances air cooling. So the condensate will occur in the separator and not in the tank
- Through the vibrations on the truck the use of an automatic drain outlet is only limited possible, so our separator, fine filter and microfilter are equipped with a hand drain outlet.